

Model 4000



Description

The Model 4000 Dynamatic Analog controller is a complete controller on one printed circuit board. Input is 115 VAC, CT., 1 phase, 50/60 Hz. Output is 4.3 Amp, 45 VDC. It is available for use with Dynamatic Air-Cooled Drives, rated .25 through 20 horsepower. This controller has a power relay and several "on-board" standard modifications, such as speed and torque control, fixed and spring set braking and linear acceleration. An on-board 4-element DIPswitch programs these modifications. Optional field modifications are available (one per controller) either factory installed or to be added later in the field as required. They include brake circuits, cascade, follower circuits, jogging, threading, torque/speed control, current limit, dancer and Mutuatrol. These additional boards are simply added using standoffs and a ribbon connector with plug. The controller is available in a NEMA 13 oil-tight enclosure with operator's elements or as an open panel mounting without operator's elements.

Features & Benefits

- Provides soft starts using a linear acceleration circuit, adjustable from 3-90 seconds.
- Accurate speed control from a closed loop keeps drive output speed within 0.5% for load changes from 0-100%
- Ensures consistent operation as 0.5% speed regulation is standard.
- On-board selectable programmable modifications are available for application versatility.
- Small wall mount enclosure is complete with operator's elements or panel mount.
- Loss of reference protections prevents runaway speeds.
- Short circuit and ground fault protection by fused input, isolates controller components from short circuits.
- Transient suppression by input suppressor prevents controller damage due to transient spikes.



Model 4000 Specifications

4000 Controller	Units used with	Fractional HP Drives AS-14 - 25 Drives
		AT-140 -250
	Horsepower range	.25 - 20 HP - Standard
	Input power, maximum	115 VAC -10%, +20%, Center Tapped (CT), 1 phase, 50/60 Hz, 460 VA
	Output power, maximum	45 VDC, 4.3 Amps, 194 watts
	Speed regulation, no load to full load change	0.5% Standard
	Enclosures	Panel Mount – Standard NEMA 13 - Optional
	Built-in modifications	Linear acceleration, fixed braking, torque control
	Field modifications (1 per unit)	Brake circuits, cascade, follower circuits, jogging, threading, torque/speed control, current limit, dancer and Mutuatrol - Optional
	Operator devices (on controller)	Start and Stop push buttons and Run Speed potentiometer - Standard
	Closed loop speed control	Standard
	Controller protective features	Input fuses, low line voltage, line transients, isolated signal circuits, output over-current
	Line regulation for +/-10% input line voltage change	+/-0.1%
	Thermal drift per degree C	+/-0.05%
	Minimum regulated speed range	50 RPM
	Maximum ambient	104° F (40° C) enclosed 149° F (65° C) panel mount



Model 4000 Ordering Information

Completely Assembled Controllers

The Model 4000 is supplied as a panel-mounted controller or in a NEMA 13 enclosure. A power relay with a set of NO contacts, wired to a terminal strip for customer use, is a standard feature. The input power to the controller is provided either by a motor winding in the drive or a separate 115 VAC, CT input transformer. The Model 4000 controller has the operator controls mounted on the cover of the enclosure. Separate operator's stations are available upon request from the factory. The modified controllers below include the basic speed controller and mounting of the modification board. The controllers below are completely assembled. For applications where downtime is critical, spare modification board part numbers are also supplied on the next page.

A complete NEMA 13 enclosed controller consists of a NEMA 13 Enclosure with cover and, when applicable, a modification board. The base is an enclosure containing the basic printed circuit board. The cover includes oil-tight operator's elements when required.

NOTE: MODIFIED CONTROLLERS INCLUDE THE BASIC SPEED CONTROLLER

4000 Controller Selection Table

	Complete Controllers & Modifications		
Description	Open Panel Mount	NEMA 13 Enclosure	
Description	Part Number	Part Number	
Basic Speed Controller	15-000533-1001	15-000551-1001	
Main Control – PCB Only – Unassembled	Not Panel Mounted	15-000530-1005	
Modified Controllers:			
Accel/Decel, Linear	15-000533-1025	15-000551-1025	
Accel/Decel, Linear & Separately Adjustable Jog	15-000533-1025	15-000551-1026	
Braking, Adjustable	15-000533-1002	15-000551-1002	
Braking, Adjustable & Jog at Run Speed	15-000533-1004	15-000551-1004	
Cascade, Man/Auto	15-000533-1008	15-000551-1008	
Dancer Position (Potentiometer sold separately	15-000533-1016	15-000551-1016	
(See Page 114)			
Dancer Position & Mutuatrol	15-000537-1001	NA	
Follower, Instrument Signal, Man/Auto			
a. Ratio pot internal	15-000533-1010	15-000551-1010	
b. Ratio pot external	15-000533-1011	15-000551-1011	
Follower, Tachometer, Man/Auto	15-000533-1009	15-000551-1009	
Jog at Run Speed	15-000533-1003	15-000551-1003	
Jog, Separately Adjustable	15-000533-1005	15-000551-1005	
Mutuatrol	15-000533-1017	15-000551-1017	
Mutuatrol & Jog at Run Speed	15-000533-1018	15-000551-1018	
Threading			
a. Thread pot internal	15-000533-1006	15-000551-1006	
b. Thread pot external	15-000533-1007	15-000551-1007	
Torque Control	15-000533-1012	15-000551-1012	
Torque/Speed Control	15-000533-1013	15-000551-1013	
Torque Limit (includes 15-203-3 Current	15-000533-1014	15-000551-1014	
Transformer)			
Torque Limit & Jog at Run Speed	15-000533-1015	15-000551-1015	
Blank Cover Control	NA	15-000551-1030	




Model 4000 Ordering Information

Spare Modification Boards Selection Table

Description	Modification Board Part Number
Basic Speed Controller	
Accel/Decel, Linear	15-000446-1004
Accel/Decel & Adjustable Jog	15-000446-1004
Braking, Adjustable	15-000444-1004
Braking, Adjustable & Jog at Run Speed	15-000444-1004
Cascade, Man/Auto	15-000444-1003
Dancer Position (order Dancer Pot, No.15-393-715)	15-000444-1007
Follower, Instrument Signal, Man/Auto	
a. Ratio pot internal	15-000446-1005
b. Ratio pot external	15-000446-1005
Follower, Tachometer, Man/Auto	15-000444-1001
Jog at Run Speed	NA
Jog, Separately Adjustable	15-000444-1003
Mutuatrol	15-000446-1002
Mutuatrol & Jog at Run Speed	15-000446-1002
Threading	
a. Thread Pot Internal	15-000444-1003
b. Thread Pot External	15-000444-1003
Torque Control	NA
Torque/Speed Control	15-000444-1005
Torque Limit (includes a 15-203-3 Current Transformer)	15-000445-1001
Torque Limit & Jog at Run Speed	15-000445-1001
Blank Cover Controller	



Models 4000 and 4050 Panel Mount Outline Drawings

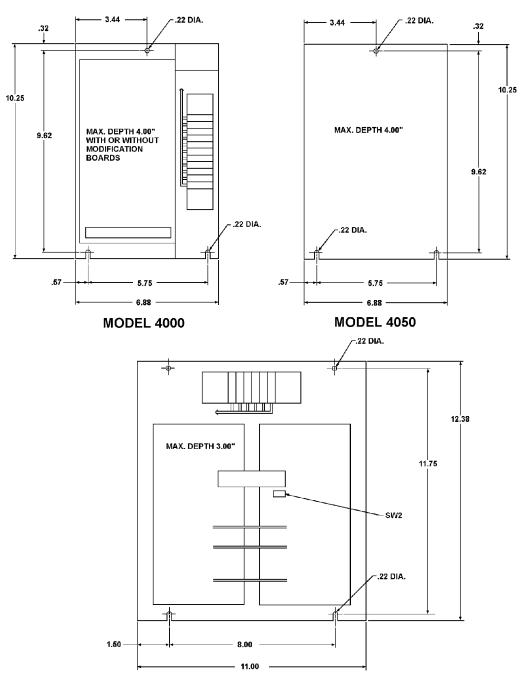

MODEL 4000
WITH DANCER POSITION & MUTUATROL

DIMENSIONS ARE IN INCHES